


LIGHTHOUSE PRO XLS™

PH Probe Module

Instructions

1. **IMPORTANT:** Disconnect power on the Lighthouse Pro before connecting the Probe Module!
2. Connect the Probe Module cable to any of the 4 probe adapter connectors on the back of the console.
3. Remove the protective cap from the PH probe and rinse in fresh water. Connect the PH probe to the Probe Module.
4. Power up the Lighthouse Pro. The Lighthouse will scan the probe adapter ports during power up and add the new PH Probe Module to its list of active probes.
5. Perform the PH calibration procedure as described in the Lighthouse Pro Installation Manual.

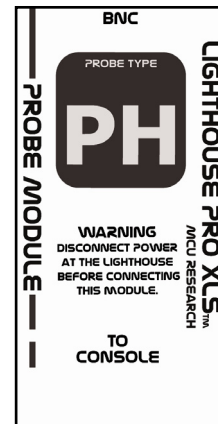

Notes

The PH calibration settings are associated with the probe adapter connector where you originally calibrated the electrode. For example, if the Probe Module is plugged into connector #2 when you calibrated, then the calibration settings stay with connector #2. If you move the Probe Module to a different connector number, you will need to recalibrate.

It is essential to disconnect power when attaching Probe Modules. This is because the Lighthouse searches for new hardware only during the power up sequence.

The white, salt-like crust around the PH probe shipping cap is NORMAL. This is a non-toxic material that seals the rubber shipping cap to the probe. Remove and discard the cap, then rinse off the white material under fresh water. Once the cap is removed, always keep the probe tip submerged in water.